
MODEL NUMBERING SYSTEM | Model AVE

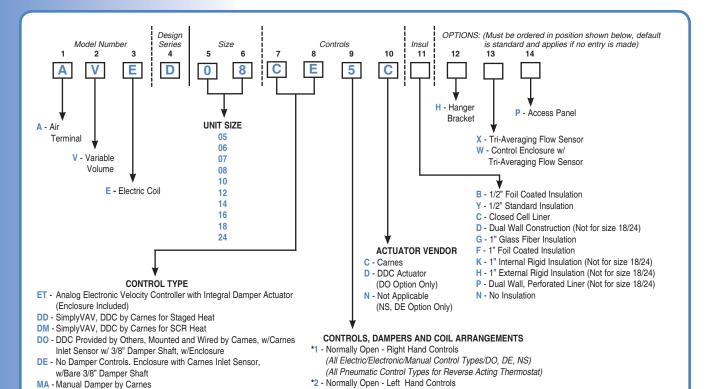



(All Electric/Electronic/Manual Control Types/DO, DE, NS)


(All Pneumatic Control Types for Reverse Acting Thermostat)

* Electric, Electronic and DDC Units **DO NOT** fail open. '1' or '2' is used for Right or Left Hand Only. Electric/Electronic Units are shipped with the Damper in the Open Position. **NOTE**: Hand of controls is determined by facing the averaging flow sensor (inlet of the unit) with the supply air hitting the back of your head.

▼ Electric Thermostat

Shaft (No Enclosure)


NS - No Damper Controls, w/Carnes Inlet Sensor, w/bare 3/8" Damper

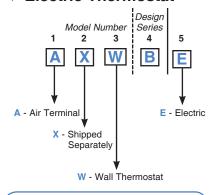

A Carnes Electric Thermostat **must be ordered** with the Electric ER and EK Control Options.


Power Transformers are included with the Electric Heater.

▼ Electronic Thermostat

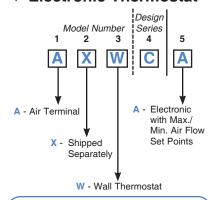

A Carnes Electronic Thermostat must be ordered with the ET Electronic Control Option.

▼ Direct Digital Control (DD/DC/DM)

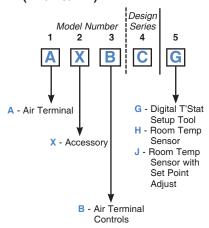

B-32